 



MOUNTS INCLUDED



STANDARD MOUNT
WITH (2) KNOBS



 1/4"-20 AND
COLD-SHOE MOUNT



THUMBSCREWS (2)



MOUNTING TO DEVICES

ACTION CAM

The Rugo™ can be mounted to an Action Cam via the removable Standard Mount. Line up the mounts on the Rugo™ with the mounts on the Action Cam and then tighten the Mount Knobs.

NOTE: Orientation of Knobs should match as shown below.



CAMERA

The Rugo™ can be mounted to a DSLR camera via the removable Cold-shoe Mount. Simply slide the mount onto the camera flash attachment and twist the Locking Ring until securely fastened.



TRIPOD OR FOXFURY PUCK ADAPTOR

The Rugo™ can be mounted to most tripods or to the FoxFury Puck Adaptor (purchased separately) via the provided 1/4"-20 Mount. Twist the threaded hole of the Rugo™ 1/4"-20 Mount onto the screw of the tripod or Puck Adaptor. Then, twist the Rugo™ and Puck Adaptor until it is securely fastened.

